

LANGATTOMAT PAINONAPPIKOTELOT

Koteloitu painonappi

SW14-080-RFH8

- Yhdistetään langattomasti releyksikköön, kantama jopa 80m
- Ei paristoja tai akkuja
- IP66

 


TUOTEKUVAUS

EI PARISTOJA, EI KAAPELEITA, EI RAJOITTEITA!

Sarjaan on saatavissa raja-, köysi- tai jalkakytin sekä painonappi ja painonappikotelo. Toimilaite yhdistetään langattomasti releyksikköön, josta saadaan releulostulo. Yhteen releeseen voidaan yhdistää jopa 28 toimilaitetta. Toimilaite saa energiansa kineettisestä liike-energiasta, joka syntyy kun esim. rajakytimen toimipäätä painetaan. Tehdasympäristössä kantama on 30 m ja vapaassa tilassa jopa 80 m. Lisäksi on saatavissa antenni, jolla kantamaa voidaan vahvistaa.

Tilausavain

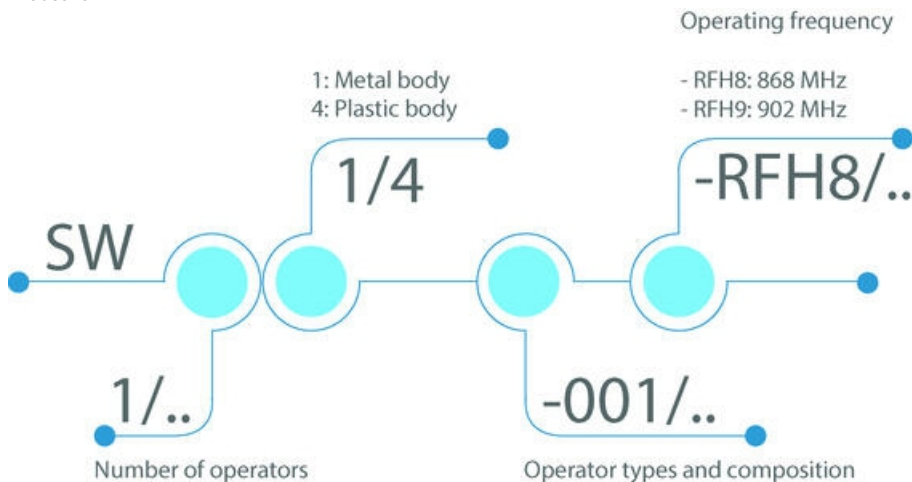

TEKNISET TIEDOT



IP-luokka	IP66
Max. käyttölämpötila	70 °C
Min. käyttölämpötila	-25 °C
Rungon materiaali	Muovi



RRH8 (868MHz) and RRH9 (902MHz) receivers

Installation tips

  The wireless signal works at its best when the space is free between the receiver and the transmitter. Eliminate as far as possible obstacles, mostly if they are metallic!



Receiver	Manufacturer of open through for installation
SW11-001-8F98	868MHz
SW14-001-8F98	868MHz
SW11-001-9F98	902MHz
SW14-001-9F98	902MHz

One operator - White ON pushbutton



Code	Description	Frequency
SW11-001-8F98	Chrome plated zamak body	868MHz
SW14-001-8F98	Plastic body	868MHz
SW11-001-9F98	Chrome plated zamak body	902MHz
SW14-001-9F98	Plastic body	902MHz

One operator - Green START pushbutton



Code	Description	Frequency
SW11-002-8F98	Chrome plated zamak body	868MHz
SW14-002-8F98	Plastic body	868MHz
SW11-002-9F98	Chrome plated zamak body	902MHz
SW14-002-9F98	Plastic body	902MHz

One operator - Black 40mm mushroom pushbutton without latch



Code	Description	Frequency
SW11-003-8F98	Chrome plated zamak body	868MHz
SW14-003-8F98	Plastic body	868MHz
SW11-003-9F98	Chrome plated zamak body	902MHz
SW14-003-9F98	Plastic body	902MHz

One operator - Yellow 40mm mushroom pushbutton without latch



Code	Description	Frequency
SW11-004-8F98	Chrome plated zamak body	868MHz
SW14-004-8F98	Plastic body	868MHz
SW11-004-9F98	Chrome plated zamak body	902MHz
SW14-004-9F98	Plastic body	902MHz

One operator - Black 30mm mushroom pushbutton without latch



Code	Description	Frequency
SW11-005-8F98	Chrome plated zamak body	868MHz
SW14-005-8F98	Plastic body	868MHz
SW11-005-9F98	Chrome plated zamak body	902MHz
SW14-005-9F98	Plastic body	902MHz

One operator - Black 60mm mushroom pushbutton without latch



Code	Description	Frequency
SW11-006-8F98	Chrome plated zamak body	868MHz
SW14-006-8F98	Plastic body	868MHz
SW11-006-9F98	Chrome plated zamak body	902MHz
SW14-006-9F98	Plastic body	902MHz

One operator - Two positions selector switch 0-1 maintained



Code	Description	Frequency
SW11-007-8F98	Chrome plated zamak body	868MHz
SW14-007-8F98	Plastic body	868MHz
SW11-007-9F98	Chrome plated zamak body	902MHz
SW14-007-9F98	Plastic body	902MHz

One operator - Two positions selector switch with key 0-1 maintained



Code	Description	Frequency
SW11-008-8F98	Chrome plated zamak body	868MHz
SW14-008-8F98	Plastic body	868MHz
SW11-008-9F98	Chrome plated zamak body	902MHz
SW14-008-9F98	Plastic body	902MHz

One operator - Joystick one positions selector switch with returns



Code	Description	Frequency
SW11-009-8F98	Chrome plated zamak body	868MHz
SW14-009-8F98	Plastic body	868MHz
SW11-009-9F98	Chrome plated zamak body	902MHz
SW14-009-9F98	Plastic body	902MHz

One operator - Black extended pushbutton



Code	Description	Frequency
SW11-010-8F98	Chrome plated zamak body	868MHz
SW14-010-8F98	Plastic body	868MHz
SW11-010-9F98	Chrome plated zamak body	902MHz
SW14-010-9F98	Plastic body	902MHz

One operator - Black 90mm wobble palm switch



Code	Description	Frequency
SW11-000-8F98	Plastic body	868MHz
SW14-000-8F98	Plastic body	868MHz

Two operators - UP & DOWN pushbuttons



Code	Description	Frequency
SW21-001-8F98	Chrome plated zamak body	868MHz
SW24-001-8F98	Plastic body	868MHz
SW21-001-9F98	Chrome plated zamak body	902MHz
SW24-001-9F98	Plastic body	902MHz

Two operators - ON & OFF pushbuttons



Code	Description	Frequency
SW21-002-8F98	Chrome plated zamak body	868MHz
SW24-002-8F98	Plastic body	868MHz
SW21-002-9F98	Chrome plated zamak body	902MHz
SW24-002-9F98	Plastic body	902MHz

Two operators - START & STOP pushbuttons





Code	Description	Frequency
SW21-003-8F98	Chrome plated zamak body	868MHz
SW24-003-8F98	Plastic body	868MHz
SW21-003-9F98	Chrome plated zamak body	902MHz
SW24-003-9F98	Plastic body	902MHz



Installation tips

  The wireless signal works at its best when the space is free between the receiver and the transmitter. Eliminate as far as possible obstacles, mostly if they are metallic!



RRH8 (868MHz) and RRH9 (902MHz) receivers

Main features

One operator - White ON pushbutton



Code	Description	Frequency
SW11-001-8F98	Chrome plated zamak body	868MHz
SW14-001-8F98	Plastic body	868MHz
SW11-001-9F98	Chrome plated zamak body	902MHz
SW14-001-9F98	Plastic body	902MHz

One operator - Green START pushbutton



Code	Description	Frequency
SW11-002-8F98	Chrome plated zamak body	868MHz
SW14-002-8F98	Plastic body	868MHz
SW11-002-9F98	Chrome plated zamak body	902MHz
SW14-002-9F98	Plastic body	902MHz

One operator - Black 40mm mushroom pushbutton without latch



Code	Description	Frequency
SW11-003-8F98	Chrome plated zamak body	868MHz
SW14-003-8F98	Plastic body	868MHz
SW11-003-9F98	Chrome plated zamak body	902MHz
SW14-003-9F98	Plastic body	902MHz

One operator - Yellow 40mm mushroom pushbutton without latch



Code	Description	Frequency
SW11-004-8F98	Chrome plated zamak body	868MHz
SW14-004-8F98	Plastic body	868MHz
SW11-004-9F98	Chrome plated zamak body	902MHz
SW14-004-9F98	Plastic body	902MHz

One operator - Black 30mm mushroom pushbutton without latch



Code	Description	Frequency
SW11-005-8F98	Chrome plated zamak body	868MHz
SW14-005-8F98	Plastic body	868MHz
SW11-005-9F98	Chrome plated zamak body	902MHz
SW14-005-9F98	Plastic body	902MHz

One operator - Black 60mm mushroom pushbutton without latch



Code	Description	Frequency
SW11-006-8F98	Chrome plated zamak body	868MHz
SW14-006-8F98	Plastic body	868MHz
SW11-006-9F98	Chrome plated zamak body	902MHz
SW14-006-9F98	Plastic body	902MHz

One operator - Two positions selector switch 0-1 maintained



Code	Description	Frequency
SW11-007-8F98	Chrome plated zamak body	868MHz
SW14-007-8F98	Plastic body	868MHz
SW11-007-9F98	Chrome plated zamak body	902MHz
SW14-007-9F98	Plastic body	902MHz

One operator - Two positions selector switch with key 0-1 maintained



Code	Description	Frequency
SW11-008-8F98	Chrome plated zamak body	868MHz
SW14-008-8F98	Plastic body	868MHz
SW11-008-9F98	Chrome plated zamak body	902MHz
SW14-008-9F98	Plastic body	902MHz

One operator - Joystick one positions selector switch with returns



Code	Description	Frequency
SW11-009-8F98	Chrome plated zamak body	868MHz
SW14-009-8F98	Plastic body	868MHz
SW11-009-9F98	Chrome plated zamak body	902MHz
SW14-009-9F98	Plastic body	902MHz

One operator - Black extended pushbutton



Code	Description	Frequency
SW11-010-8F98	Chrome plated zamak body	868MHz
SW14-010-8F98	Plastic body	868MHz
SW11-010-9F98	Chrome plated zamak body	902MHz
SW14-010-9F98	Plastic body	902MHz

One operator - Black 90mm wobble palm switch



Code	Description	Frequency
SW11-000-8F98	Plastic body	868MHz
SW14-000-8F98	Plastic body	868MHz

Two operators - UP & DOWN pushbuttons



Code	Description	Frequency
SW21-001-8F98	Chrome plated zamak body	868MHz
SW24-001-8F98	Plastic body	868MHz
SW21-001-9F98	Chrome plated zamak body	902MHz
SW24-001-9F98	Plastic body	902MHz

Two operators - ON & OFF pushbuttons



Code	Description	Frequency
SW21-002-8F98	Chrome plated zamak body	868MHz
SW24-002-8F98	Plastic body	868MHz
SW21-002-9F98	Chrome plated zamak body	902MHz
SW24-002-9F98	Plastic body	902MHz

Two operators - START & STOP pushbuttons



Code	Description	Frequency
SW21-003-8F98	Chrome plated zamak body	868MHz
SW24-003-8F98	Plastic body	868MHz
SW21-003-9F98	Chrome plated zamak body	902MHz
SW24-003-9F98	Plastic body	902MHz